

Installation Guide

For Automatic Main Switch
897612, 897624



DOCUMENT ID: 5I96

REVISION: 8

DATE: 2025

LANGUAGE: EN

MI

Contents

Warnings and Safety	2
Installation Manual	
Responsibility of the Installer	3
Product Measurements	4
Automatic Main Switch (AMS)	5
Automatic Main Switch (AMS) Installation	6
AMS Fuse and Battery Cable Installation and Override Button	6
Electrical Installation	7
Single Thruster Technical Wiring Diagram	8
Dual Thruster Technical Wiring Diagram	9
Service	10
Sleipner Group Waste Disposal and Recycling Guide	11
Service and Support	12
Product Spare Parts and Additional Resources	12
Warranty Statement	12
Patents	12

Warnings and Safety

MC_0800

It is essential to follow all instructions within this document to avoid potential personal injury, death, or damage to existing products in the vessel, the vessel's hull integrity, and including this product during installation or operation. Failure to follow instructions within this document will render all warranties given by Sleipner Motor as VOID.

Warnings and situations requiring extra caution are outlined in the documentation. Take extra consideration when warnings are outlined.



WARNING

Indicate a potentially hazardous situation that, if not avoided, could result in death or severe injury.



CAUTION

Indicates a potentially hazardous situation that could result in minor or moderate injury or critical damage to vessel integrity if not avoided.

MC_0020

General:

- The installer must read this document to ensure necessary familiarity with the product before installation.
- Directions outlined in this document cannot be guaranteed to comply with all international and national regulations, including but not limited to health and safety procedures. It is the installers responsibility to adhere to all applicable international and national regulations when installing Sleipner products.
- This document contains general installation guidelines intended to support experienced installers. Contact professional installers familiar with the vessel, Sleipner products and applicable regulations if assistance is required.
- If local regulation requires any electrical work to be performed by a licensed professional, seek a licensed professional.
- When planning the installation of Sleipner products, ensure easy access to the products for future service and inspection requirements.

For Sleipner automatic main switch

MC_0273




- Install the automatic main switch as close to the battery bank as possible.
- Only connect the Sleipner automatic main switch to compatible original Sleipner control panels or other Sleipner control devices. Do not use it with any other products.
- The automatic main switch must be installed in a location that ensures it remains dry at all times.
- The automatic main switch must NOT be fitted in spaces requiring Ignition protected equipment.
- Make sure to use the correct fuse for the main switch, based on the installed thruster model.



CAUTION


This manual is to be used in addition to the installation manual for the Sleipner thruster. This manual is intended for professionals only.

Measurement code	Measurement description	AMS	
		mm	inch
H	Height	194.3	7.6
L	Length	205	8.1
W	Width	79	3.11
+ W	Width including fasteners	90	3.54
(a)	Attachment hole from the top	51.5	2.03
(b)	Attachment hole from the bottom	92.8	3.65
(c)	Attachment hole from the side	37.5	1.5
(d)	Distance between attachment hole	121.8	4.8
(e)	Attachment hole from the side	45.7	1.8

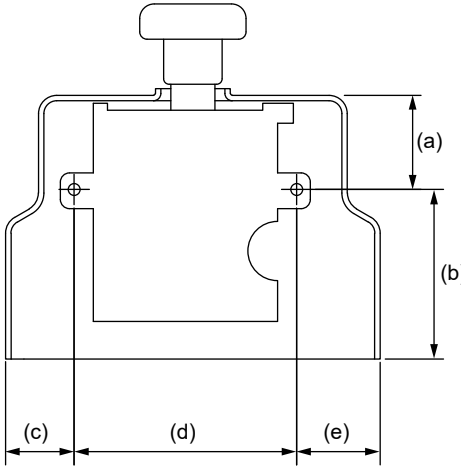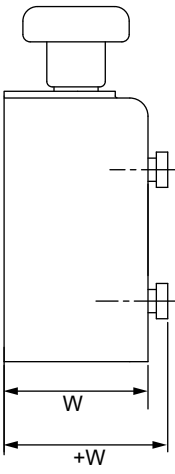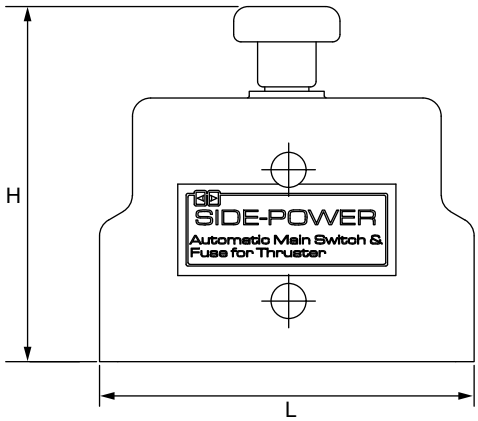

MG_0321

Automatic Main Switch (AMS)

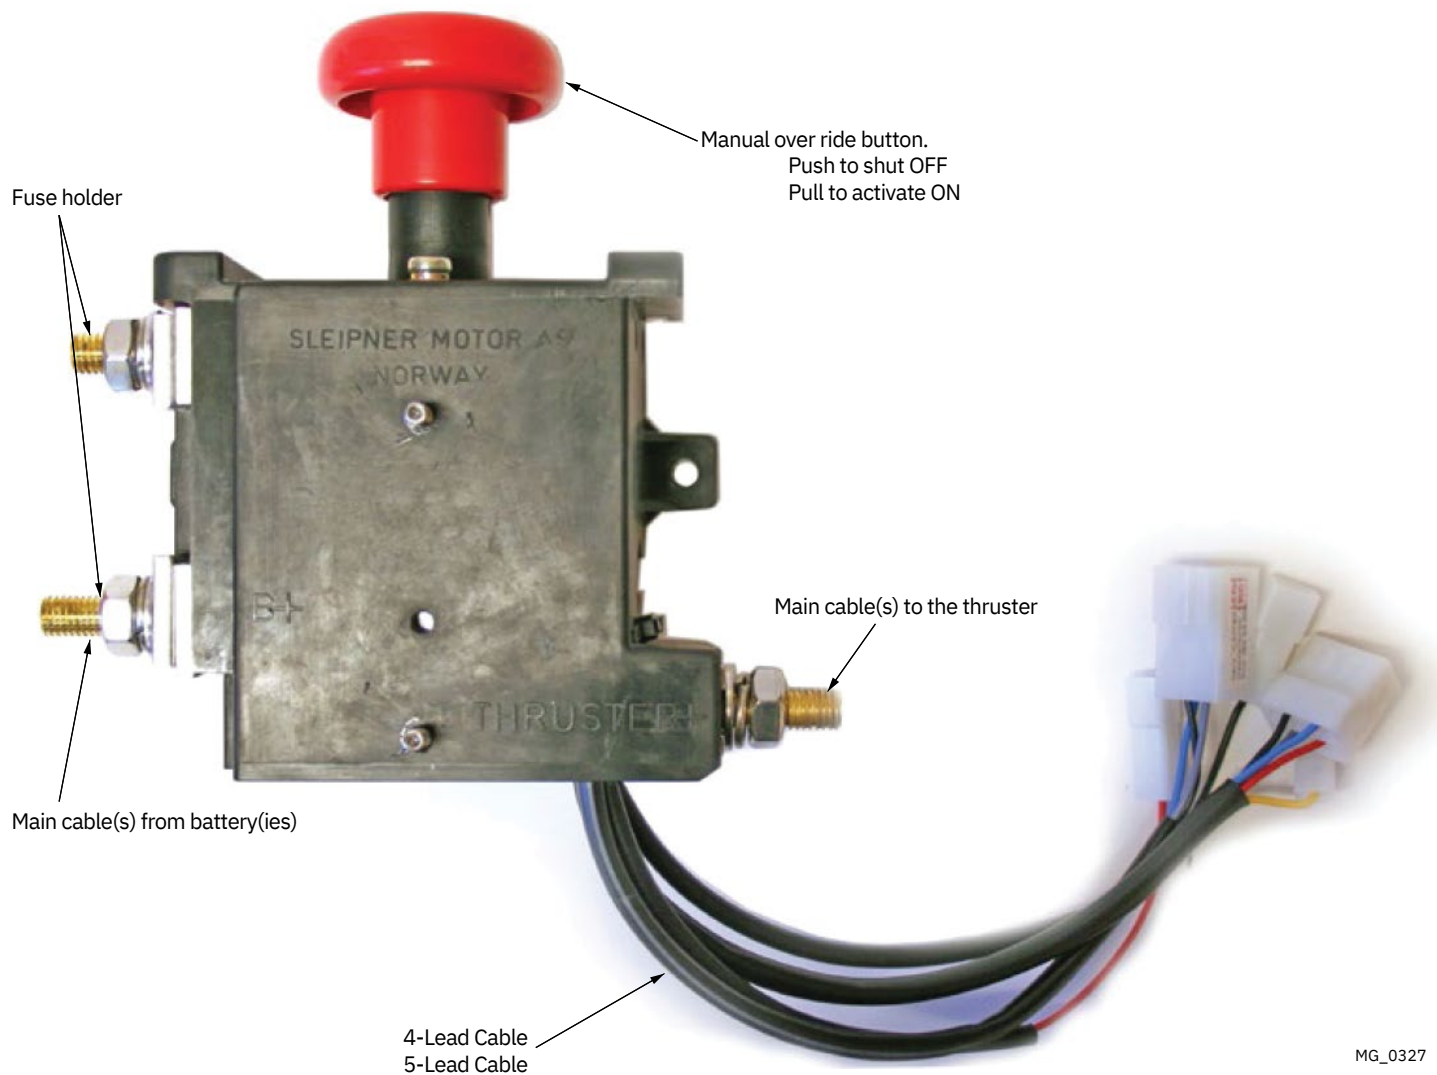


Automatic Main Switch (AMS) Installation

MC_0275

Installing the Automatic Main Switch (AMS).

1. Remove the cover screws and cover from the Automatic Main Switch.
2. Choose an appropriate location (close to the battery) for installing the AMS that provides quick and easy access to the shut-off button while minimizing the length of power cables. Secure the AMS using the two mounting holes on each side

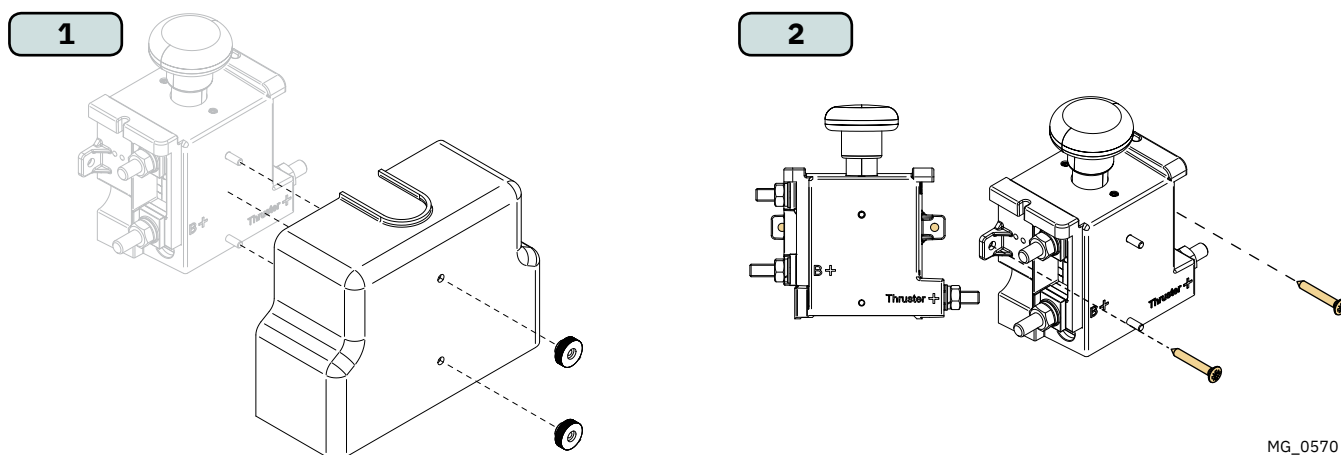

Installing the fuse and battery cable(s).

1. Remove the nuts and the washers.
2. Install the fuse. Select the fuse type and rating according to recommendations in the thruster installation manual.
3. Assemble the washers, battery cable(s) and end washer and nuts.
4. Tighten the nuts to the recommended torque. The bolts are made of brass, and excessive torque may damage the threads.

Fitting the thruster cable(s).





5. Remove the nuts and washers.
6. Fit the cable(s) to the bolt and assemble washers and nut.
7. Tighten the nut with the recommended torque.

Manual override button.

8. Remote Controlled ON/OFF (Default Position)
9. OFF (Manual override).
10. Ensure the switch is in the OFF position when leaving the boat for long periods or when installing or servicing the thruster system.



CAUTION
Do NOT use washers between lugs, as this may cause overheating and lead to a thermal event. Spring washers must be placed in the outer position before tightening the nut.

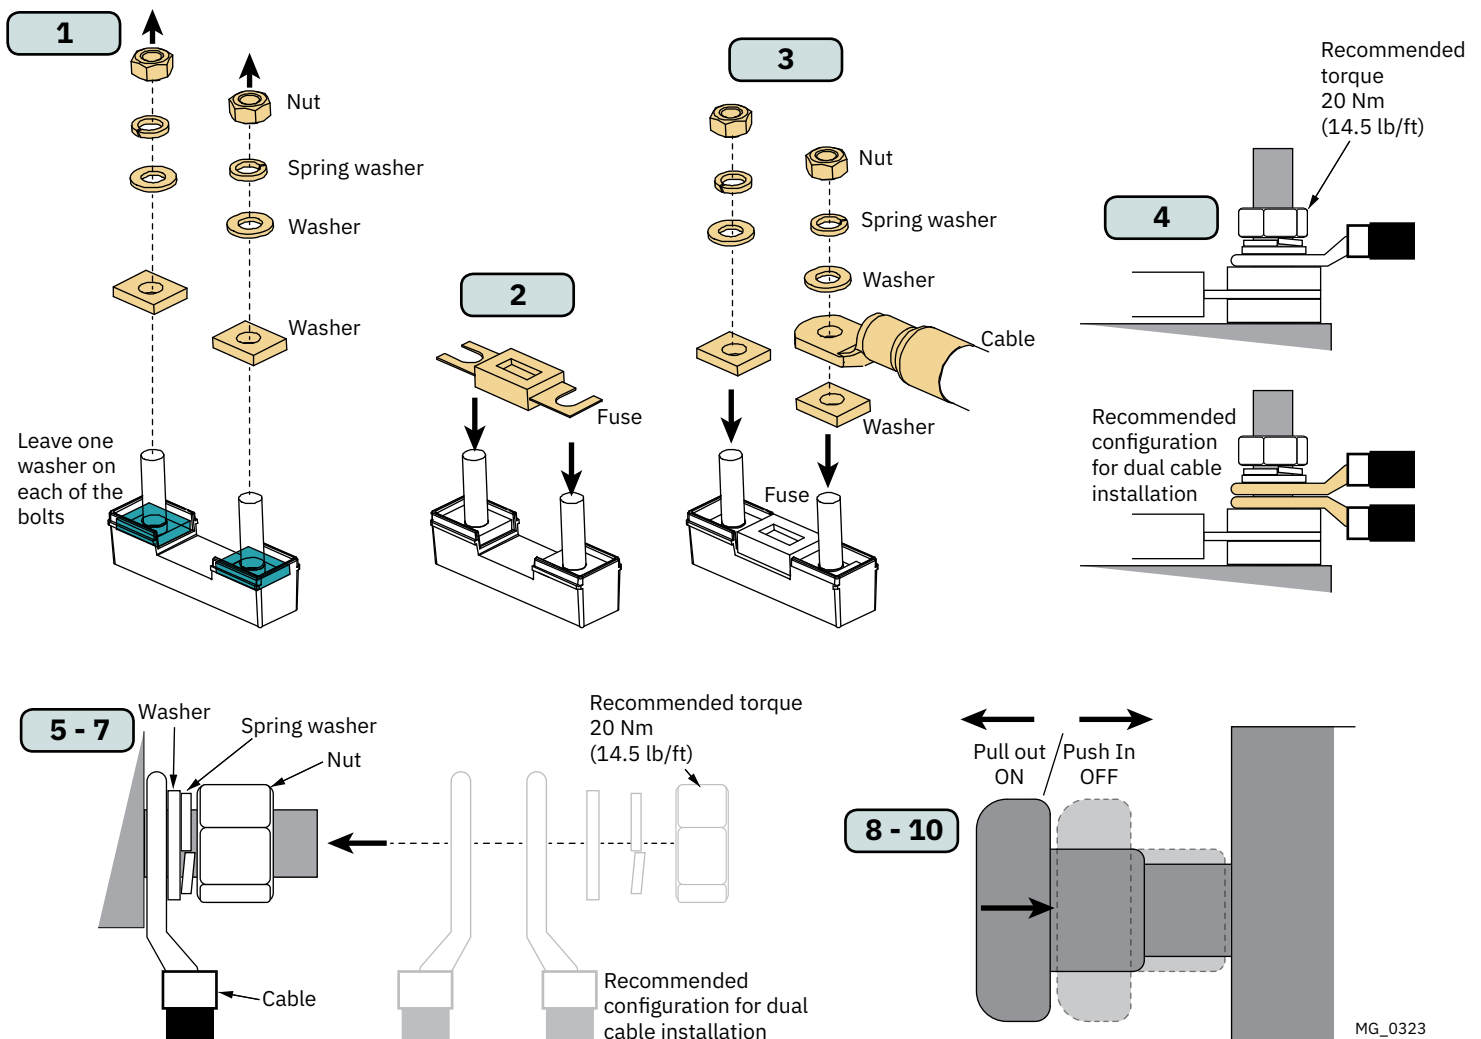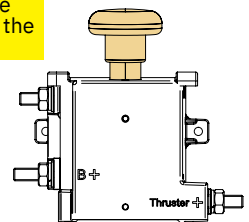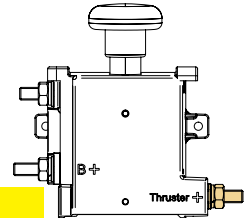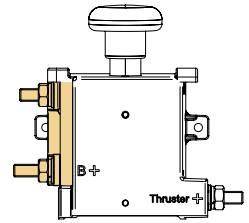

ON/ OFF configuration

Use a 4-lead control cable between the thruster and the automatic main switch. **(NB: Only 3 leads are used, The red wire is not connected into the automatic main switch.)**

Proportional configuration

Use 5-lead control cables between the automatic main switch and control panels. **(NB: use 5-lead Y-connectors to branch off to all controls fitted.)**

Refer to the table in the thrusters manual for deciding the main cable sizes.




CAUTION

After all electrical connections have been completed, turn off main switch and check the following with an ohmmeter:


1. There is no electrical connection between electro-motor flange and the positive terminal on the motor.
2. There is no electrical connection between electro-motor flange and the negative terminal on the motor.

If unsure contact skilled personnel.

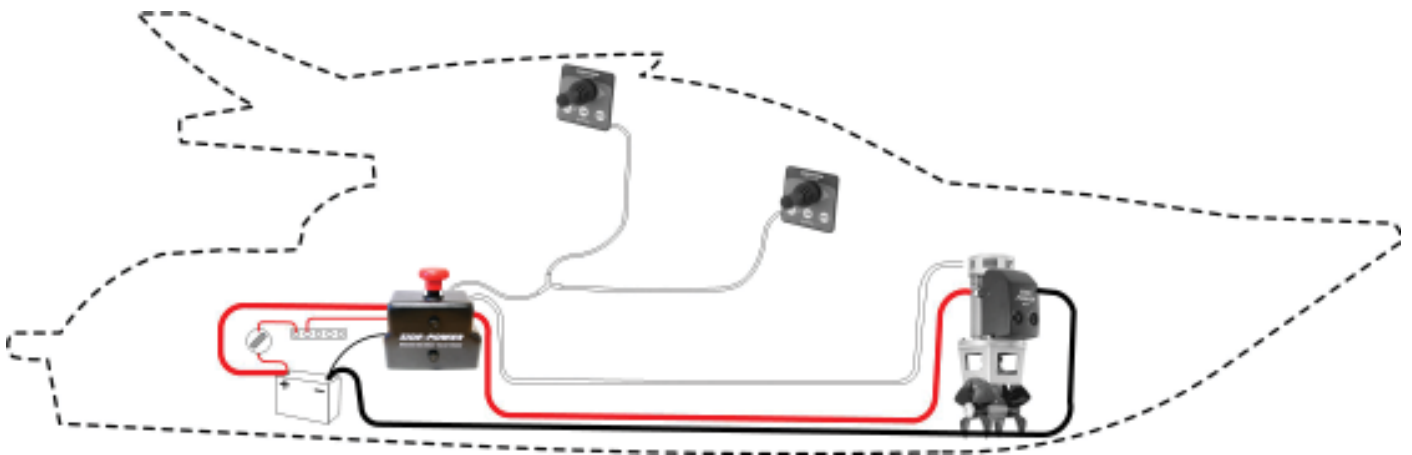

MG_0322


Single Thruster Technical Wiring Diagram

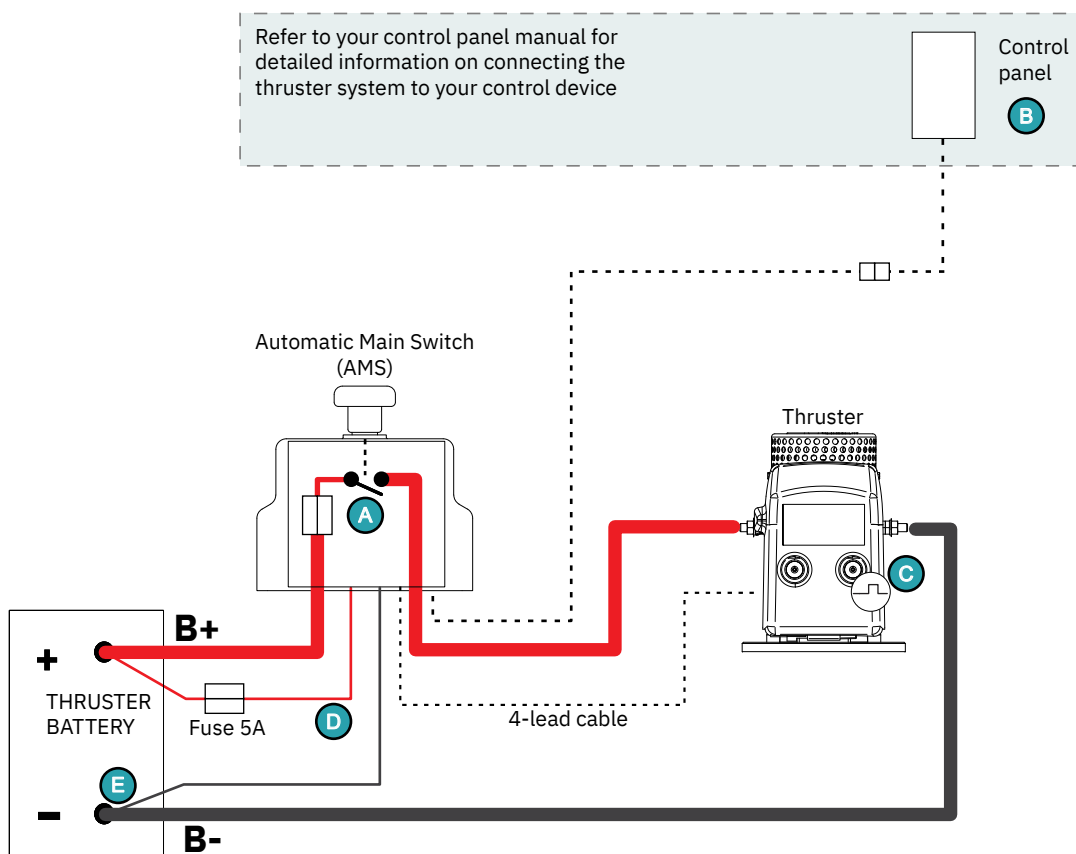

- A** Main switch with fuse, 12 or 24V version.
Select fuse size according to recommendation in thruster installation manual.
- B** ON/OFF thruster control panel.
- C** Thermal switch built into the thruster motor.
- D** Supply for the solenoid with fuse for protection.
- E** Battery voltage according to voltage ratings of thruster motor.

Dual Thruster Technical Wiring Diagram

Refer to your control panel manual for detailed information on connecting the thruster system to your control device

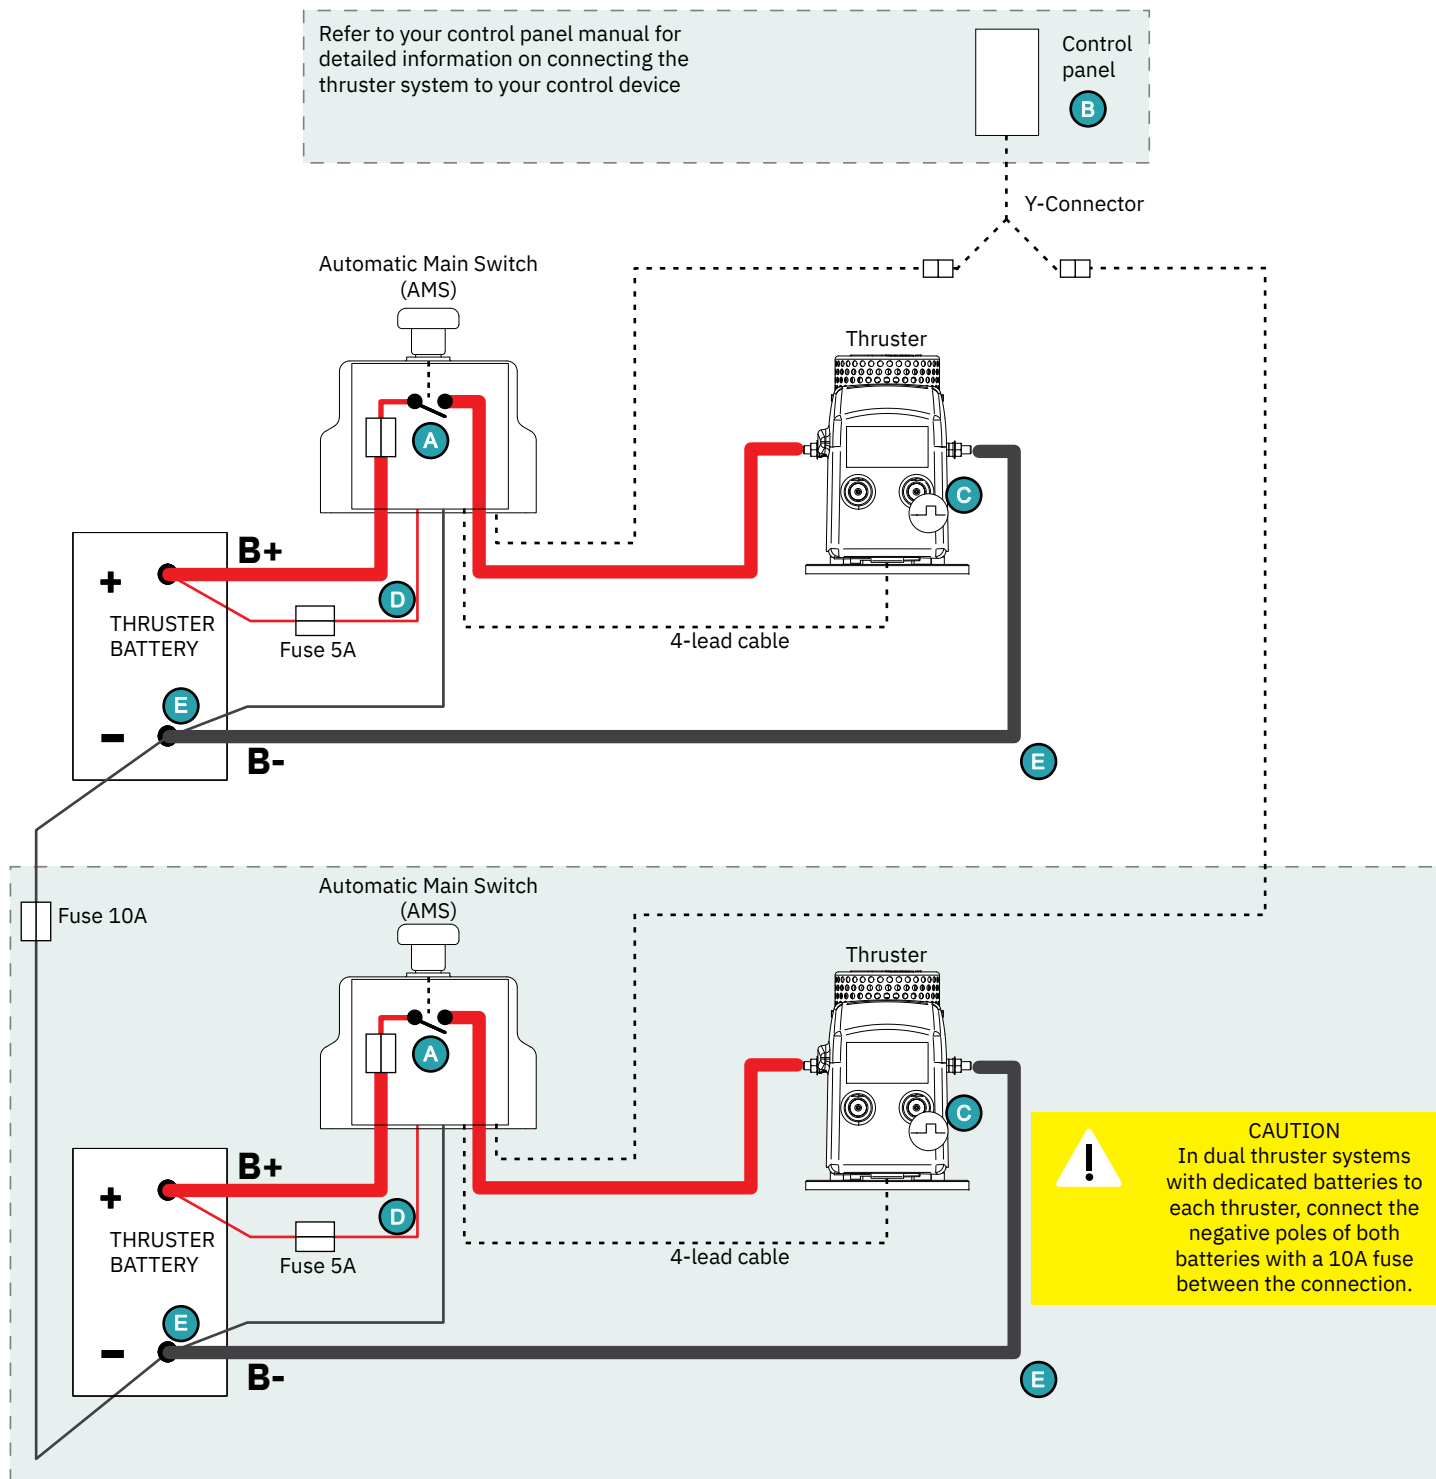

CAUTION

In dual thruster systems with dedicated batteries to each thruster, connect the negative poles of both batteries with a 10A fuse between the connection.



CAUTION

Check the following with the main switch in the off position

After all electrical connections have been completed check with an ohm meter that there is no electrical connection between electro motor body and positive terminal on the motor and between the electro motor body and the negative (A1) terminal on the motor. If you feel unsure about how to perform this check, contact skilled personnel for guidance.

A Main switch with fuse, 12 or 24V version. Select fuse size according to recommendation in thruster installation manual.

B ON/OFF thruster control panel.

C Thermal switch built into the thruster motor.

D Supply for the solenoid with fuse for protection.

E Battery voltage according to voltage ratings of thruster motor.

Service/ maintenance

on all-electric equipment regularly Ensure:

- Equipment is clean and dry.
- Ensure all cable and other connections are tight and without signs of excessive heat or corrosion.

Troubleshooting

The control panel will not activate:

- Ensure the automatic main switch receives positive feed over its red thin lead.
(NB: If this goes over another main switch in the boat, make sure that this is ON.)
- Check the internal overheat switch (bi-metal switch on the circuit board) in the automatic main switch has not opened.
(NB: It automatically resets if it is open while the main switch is cold, contact your nearest Sleipner service for assistance.)
- Check 5A fuse installed on the red positive cable to the automatic main switch.
- Check the overheat switch in the electro motor has not blown due to excessive heat.
- Check all control cable connections against the wiring diagrams in the thrusters manual are correct.

The control panel activates, but the thruster will not run:

- Ensure the manual over-ride knob is in "ON" position (pulled out).
- Check that the main power fuse in the automatic main switch is not blown.
(NB: if so, ensure that it is the right size. If it is the correct size but the fuse continues to blow, the reason for this must be identified.)
- Check the main switch activates when the control panel is activated. If not, check the wiring, especially that you have a constant separate negative feed (thin black lead) and the control panel is feeding a positive into the yellow lead.
- Check there is power supplied to the thruster. If it is not while the previous points are checked OK, the main cables must be checked.
- If there is power at the thruster, measure the voltage at the main battery cable connection points into the thruster while running the thruster.
(NB: If below 8,5V (12V system) or 16V (24V system) Check the batteries and main cables to find the reason for the voltage drop.)

Read the troubleshooting guide in the thrusters manual.

If you are unable to identify and resolve the problem, contact the nearest Sleipner service point for assistance. Have the notes from your troubleshooting handy to inform the service person of what you have already checked and observed.

Introduction:

At Sleipner Group, we prioritize sustainability and encourage the repair and re-manufacturing of products to extend their life cycles. If disposal is necessary, please follow these guidelines to recycle and manage waste responsibly, ensuring our efforts align with environmental protection efforts.

Electric Motors and Electronics:

- Disconnect from any power sources and dismantle them carefully.
- Recycle components through certified e-waste recycling centers that can adequately handle and recover electronic materials.
- Dispose of any non-recyclable electronic parts according to local environmental regulations.

Metals:

- Collect and sort metal parts for recycling as scrap metal.
- To increase recycling efficiency, ensure that metals are clean and free from non-metal attachments.

Plastics:

- Identify recyclable plastics based on local recycling guidelines.
- Remove any non-plastic components and clean them before recycling to improve the quality of the recycled material.

Hazardous Materials:

- Correctly identify any hazardous substances within components, such as batteries or capacitors etc.
- Follow local regulations for the safe disposal of hazardous materials to prevent pollution and protect environmental health.

General Disposal Instructions:

- Consult local recycling programs to determine the acceptability of various materials.
- Use authorized disposal services to ensure compliance with environmental standards.

Safe Disposal Practices:

- Adhere to local laws and regulations for waste management to minimize environmental impact and ensure community safety.

This guide is designed to help reduce our products' environmental footprint through responsible end-of-life management. Please contact your local waste management supplier or our support team for more specific disposal information or further assistance.

Find your local professional dealer from our certified worldwide network for expert service and support. visit our website www.sleipnergroup.com/support

Product spare parts and additional resources

For additional supporting documentation, we advise you to visit our website www.sleipnergroup.com and find your Sleipner product.

Warranty statement

1. Sleipner Motor AS (The "Warrantor") warrants that the equipment (parts, materials, and embedded software of products) manufactured by the Warrantor is free from defects in workmanship and materials for purpose for which the equipment is intended and under normal use and maintenance service (the "Warranty").
2. This Warranty is in effect for two years (Leisure Use) or one year (Commercial and other Non-leisure Use) from the date of delivery/purchase by the end user, with the following exceptions;
 - (a) For demonstration vessels, or vessels kept on the water, the dealer is considered as the end user from 6 months after their launch of the vessel;
 - (b) The warranty period starts no later than 18 months after the first launch of the vessel.
 Please note that the boat manufacturer and dealer must pay particular attention to correct maintenance and service both by the products manuals as well as general good practice for the location the boat is kept in the period the boat is in their care. In cases where the 6 and 18 months grace periods for boat builders and dealers are passed, it is possible to obtain a full warranty upon inspection and approval of the warrantor or such representative.
3. Certain parts, classified as wearable or service parts, are not covered by the warranty. A failure to follow the required maintenance and service work as described in the product manual render all warranty on parts or components directly or indirectly affected by this void. Please also note that for some parts, time is also a factor separately from actual operational hours.
4. This Warranty is transferable and covers the equipment for the specified warranty period.
5. The warranty does not apply to defects or damages caused by faulty installation or hook-up, abuse or misuse of the equipment including exposure to excessive heat, salt or fresh water spray, or water immersion except for equipment specifically designed as waterproof.
6. In case the equipment seems to be defective, the warranty holder (the "Claimant") must do the following to make a claim:
 - (a) Contact the dealer or service centre where the equipment was purchased and make the claim. Alternatively, the Claimant can make the claim to a dealer or service centre found at www.sleipnergroup.com. The Claimant must present a detailed written statement of the nature and circumstances of the defect, to the best of the Claimant's knowledge, including product identification and serial nbr., the date and place of purchase and the name and address of the installer. Proof of purchase date should be included with the claim, to verify that the warranty period has not expired;
 - (b) Make the equipment available for troubleshooting and repair, with direct and workable access, including dismantling of furnishings or similar, if any, either at the premises of the Warrantor or an authorised service representative approved by the Warrantor. Equipment can only be returned to the Warrantor or an authorised service representative for repair following a pre-approval by the Warrantor's Help Desk and if so, with the Return Authorisation Number visible postage/shipping prepaid and at the expense of the Claimant.
7. Examination and handling of the warranty claim:
 - (a) If upon the Warrantor's or authorised service Representative's examination, the defect is determined to result from defective material or workmanship in the warranty period, the equipment will be repaired or replaced at the Warrantor's option without charge, and returned to the Purchaser at the Warrantor's expense. If, on the other hand, the claim is determined to result from circumstances such as described in section 4 above or a result of wear and tear exceeding that for which the equipment is intended (e.g. commercial use of equipment intended for leisure use), the costs for the troubleshooting and repair shall be borne by the Claimant;
 - (b) No refund of the purchase price will be granted to the Claimant, unless the Warrantor is unable to remedy the defect after having a reasonable number of opportunities to do so. In the event that attempts to remedy the defect have failed, the Claimant may claim a refund of the purchase price, provided that the Claimant submits a statement in writing from a professional boating equipment supplier that the installation instructions of the Installation and Operation Manual have been complied with and that the defect remains.
8. Warranty service shall be performed only by the Warrantor, or an authorised service representative, and any attempt to remedy the defect by anyone else shall render this warranty void.
9. No other warranty is given beyond those described above, implied or otherwise, including any implied warranty of merchantability, fitness for a particular purpose other than the purpose for which the equipment is intended, and any other obligations on the part of the Warrantor or its employees and representatives.
10. There shall be no responsibility or liability whatsoever on the part of the Warrantor or its employees and representatives based on this Warranty for injury to any person or persons, or damage to property, loss of income or profit, or any other incidental, consequential or resulting damage or cost claimed to have been incurred through the use or sale of the equipment, including any possible failure or malfunction of the equipment or damages arising from collision with other vessels or objects.
11. This warranty gives you specific legal rights, and you may also have other rights which vary from country to country.

Patents

At Sleipner we continually reinvest to develop and offer the latest technology in marine advancements. To see the many unique designs we have patented, visit our website www.sleipnergroup.com/patents

This image shows a single sheet of white paper with horizontal ruling lines. The lines are evenly spaced and run across the width of the page. There are no margins, text, or other markings on the paper.

[illegible]

[illegible]

© **Sleipner Motor AS**, All rights reserved

The information given in the document was right at the time it was published. However, Sleipner Motor AS cannot accept liability for any inaccuracies or omissions it may contain. Continuous product improvement may change the product specifications without notice. Therefore, Sleipner Motor AS cannot accept liability for any possible differences between product and document.

**Learn more about our products at
www.sleipnergroun.com**



SLEIPNER MOTOR AS

P.O. Box 519

N-1612 Fredrikstad

Norway

www.sleipnergroun.com

Made in Norway